


USER MANUAL

SHOWCASE

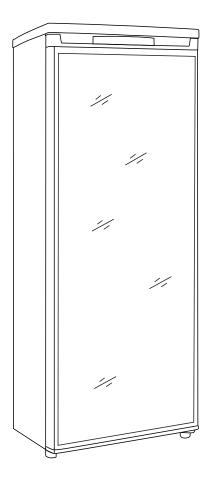

Before operating the unit, please read this manual completely.

INSTRUCTION MANUAL SAFETY PRECAUTIONS 1

- To ensure proper use, please thoroughly study these SAFETY PRECAUTIONS before operating the Unit.
- The purpose of the safety precautions in this manual is to ensure safe and correct use of the unit to minimize risks that could cause serious damage and injury to you or other persons. The safety precautions are divided into WARNINGS and CAUTIONS. Cases where improper handling of the unit could lead to death or serious injury are listed under the "AWARNING" heading. However, the cases listed under the MCAUTION" heading could also lead to serious results. To ensure the safety, adhere strictly to both types of safety precautions.

MARNING Improper handling of the unit could lead to death or serious injury.

CAUTION Improper handling of the unit could lead to serious results depending on the circumstances.


- Text set off by the exclamation mark **()** contains information that should be strictly adhered to.
- After reading the instruction manual, store it an easily accessible place where the user(s) of this
- product can easily find it.

PRECAUTIONS FOR INSTALLATION WARNING




Installation should be performed only by the dealer or a qualified expert. Attempting to install the unit yourself could result in water leakage, refrigerant leakage, electrical shock, or fire.

♦ PRECAUTIONS FOR USE

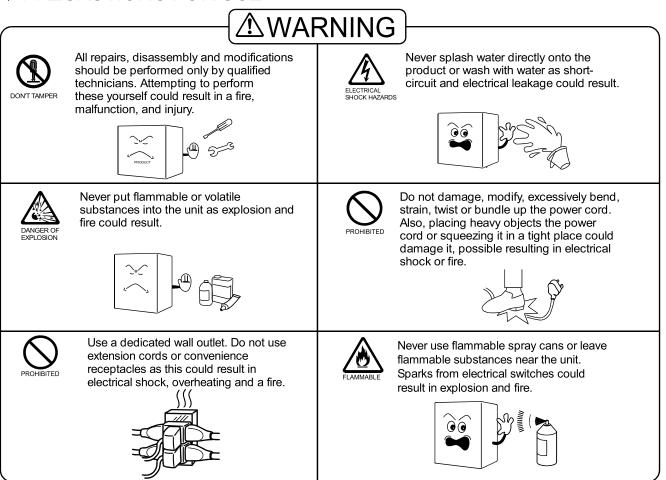

INSTRUCTION MANUAL

SAFETY PRECAUTIONS 2

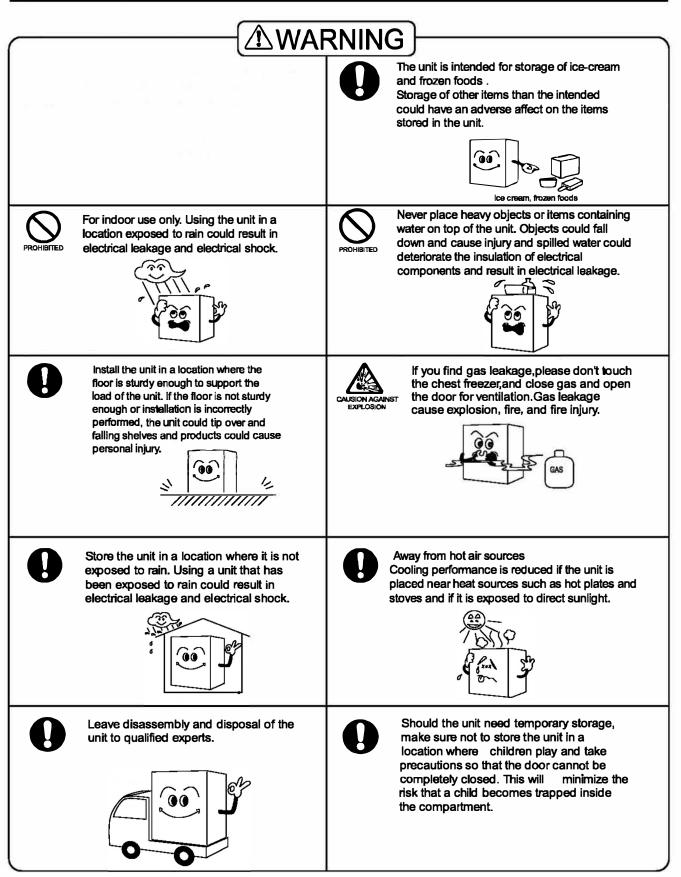

SAFETY PRECAUTIONS 3



HOW TO USE

BEFORE USE

•Remove shipping packaging, tape, etc. and leave lids open for ventilation for a while.

•The unit is cleaned before shipment. However, clean the compartment interior once after delivery.

•Following installation, refrigeration will start about 10 minutes after operation is started.

Operate for about 2 hours to cool the refrigerator compartment before placing items in the freezer.

WAIT 5 MINUTES OR MORE BEFORE RE-STARTING

Restarting the unit immediately after it has been turned off may cause fuses to blow and activate the circuit-breaker, the compressor may be overloaded, and/or other damage may occur.

DEFROSTING


When 5mm frost forms in the freezer, please shave it and throw it away.

If you defrost completely, please do it as follows.

- Please make inside empty, and disconnect the power cord plug.
- ② When frost start thawing, please shave it and you will be able to defrost in the short time.
- ③ After draining, please wipe the inside, and put a rubber cap on the drain bolt and the inside drain.



For defrosting chest freezer, don't use a hammer, knife, or bottle. If you use it, it give damage to inside evaporator, and chest freezer cannot cool, and inside goods can thaw.

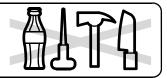



WARNING

To prevent any electrical shock hazards or injury by rotating circulation fan, always disconnect the power cord plug from the wall outlet before cleaning.

1 EXTERIOR AND COOLER COMPARTMENT

Wipe with a soft, dry cloth. If very soiled, wipe with a cloth that has been moistened with a detergent \cdot . Then wipe with a cloth that has been dipped in water.



 $\sf WARNING: Do not splash water directly onto the cooler and do not wash with water. Short-circuit and electrical shock could result.$

- Clean the cooler regularly to keep it clean at all times.
- Never use polishing powder, soap powder, benzine, oil or hot water as these will damage the painting and plastic components.



2 DOOR

• Detach the door and wipe clean with a dry cloth.

IN CASE OF THE FOLLOWING

1 POWER FAILURE

- Sudden power failure Keep opening and closing of the door to a minimum to prevent cold air from escaping from the freezer compartment. Covering exterior glass surfaces with a blanket, etc. will further help to maintain a low temperature.
- Announced power suspension In case of a long power suspension, place dry ice in the freezer compartment.
- Keep opening and closing of the door to a minimum.
- Avoid placing new items in the cooler as this will raise the temperature inside the compartment.

2 WHEN NOT USED FOR A LONG PERIOD

- Remove all items from the compartment and disconnect the power cord plug from the wall outlet.
- Clean the compartment interior and wipe away all water. To prevent mold formation and bad smell, leave the door open to dry the compartment completely.

3 WHEN NOT USED TEMPORARILY

- Please stick wood between door and chest freezer so as not to close it up.
- Please don't put chest freezer in a place where children can play. If children shut themselves up, they cannot escape from it.

INSTRUCTION MANUAL BEFORE REQUESTING SERVICE

Please check the following items if you encounter problems with the unit. If the problem continues after taking the proper remedial actions, disconnect the power cord plug from the wall outlet. Transfer the items stored in the cooler to a box or other container. Then contact the dealer from whom you purchased this unit and be ready to provide information as listed in "REQUIRED INFORMATION" below.



To prevent any electrical shock hazards, do not disconnect the power cord plug from the wall outlet with wet hands.

No refrigeration at all	 Is the power supply interrupted? Is the power cord plug disconnected from the wall outlet? Are the shop's power fuses blown and/or the circuit breaker activated? The temperature control dial in the direction of MAX.If too cold,turn dial in direction of OFF?
Inadequate refrigeration	 Is the place of installation badly ventilated? Is the freezer exposed to direct sunlight, placed near a heater or stove? Are the lids opened and closed frequently? Are items stocked beyond the load line? The temperature control dial in the direction of MAX.If too cold,turn dial in direction of MIN? Much frost forms in the chest freezer?
Excessive noise	 Is the floor underneath the freezer sturdy enough? Is the unit shaking and rattling? Is the rear panel of the unit contacting a wall, etc.? A container or something is behind the chest freezer? The compressor will generate a rather loud sound for a while after operation is started. The noise will cease together with refrigeration.
Condensation on cooler exterior	Condensation may condense on the exterior and door during hot and humid days or depending on the place of installation. This occurs when the humidity is high and water particles in the air contact cold surfaces. This is normal. wipe away condensation with a dry cloth.
The circumference of chest freezer feels hot	 Especially in summer or in starting running, the circumference of chest freezer feels hot. Because chest freezer inside has a pipe for radiating and preventing condensation. The heat do not affect inside goods.

Appliance sometimes stop running when thermostat turns off.

REQUIRED INFORMATION


- Nature of malfunction (as accurately as possible)
- 2 Product number

(inscribed on badge)

③ Serial number

- ④ Customer's name, address, phone number
- 5 Year and date of purchase
- 6 Desired date for service visit

NAME OF SPARTS

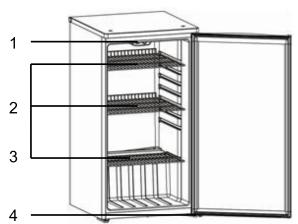

- 1. Light/Thermostat
- 2. Adjustable shelves
- 3. Shelf
- 4. Adjustable feet

Cautions:

In case the power cord or plug is damaged, please ask the

maintenance worker to change it, do not do it by yourself, hand

the plug carefully when pull or insert it, do not pull the wire.

- This appliance is intended to be used in household and similar applications
- Do not store explosive substances such as aerosol cans with flammable propellant in this appliance.
- 1. Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer
- 2. Do not damage the refrigerant circuit
- 3. Do not use Electrical appliances inside the food storage compartments of the appliances, other than those recommended by the manufacturer
- 4. The appliance shall not be discarded with the urban refuse and rubbish
- 5. The insulation foam contains flammable gases

6. The appliance shall be disposed according to the appliance regulations to obtain from your local authorities

This device is not intended to be used by people (including children) who have deficiencies in physical, sensory, mental or who do not have experience or knowledge about this device capacity unless they are supervised or directing them on how to use it in a safe manner by the person who is responsible for their safety.

• This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision."

Adexa Direct Limited UNIT 1 SWIFT POINT COSFORD LANE SWIFT VALLEY INDUSTRIAL ESTATE RUGBY CV21 1QN UK service@adexa.co.uk