

Instruction Manual Convactor Heater

CH-09FLCD

Adexa



This product is only suitable for well insulated spaces or occasional use.

DESCRIPTION OF THE SYMBOLS

Before any use, refer to the corresponding section in this user manual.



In accordance with European directives applicable to this product



Warning: In order to avoid overheating, do not cover



The crossed-out wheeled bin symbol indicates that the item should be disposed of separately from household waste. The item should be handed in for recycling in accordance with local environmental regulations for waste disposal. By separating a marked item from household waste, you will help reduce the volume of waste sent to incinerators or land-fill and minimize any potential negative impact on human health and the environment.

GENERAL SAFETY INFORMATION

1. If the cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

2. The heater must not be located immediately below a socket-outlet.
3. In order to avoid overheating, do not cover the heater.
4. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
5. Children of less than 3 years should be kept away unless continuously supervised.

Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.

CAUTION —Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.

6. Do not use this heater in the immediate surroundings of a

bath, a shower or a swimming pool and avoid direct sunlight.

7. CAUTION: In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.
8. Read all instructions carefully before using.
9. Make sure the voltage is the same as that indicated on the rating plate of the appliance.
10. Do not operate this appliance if the cable or plug becomes damaged.
11. Keep the appliance and cable away from sources of heat, sharp objects or anything that may cause damage.
12. Ensure the appliance is switched off before connecting to the mains power supply.
13. Switch off the power supply and disconnect from mains supply when not in use, before cleaning or other maintenance.
14. To disconnect the appliance, switch it "OFF", and then remove the plug from outlet. Do not pull the cord to disconnect the plug.
15. Do not operate in areas where gasoline, paint or other flammable liquids are used or stored.

16. Indoor use only.
17. To prevent a possible fire, do not block air intakes or exhaust in any manner.
18. Don't touch the hot surfaces.
19. Do not insert or allow foreign objects to enter any ventilation or exhaust opening, as this may cause an electric shock, fire or damage to the appliance.
20. Always ensure that hands are dry before operating or adjusting any switch on the product or touching the plug and socket-outlet.
21. Do not leave this appliance unattended when it's in use.
22. The most common cause of overheating is deposits of dust or fluff in the appliance. Ensure these deposits are removed regularly by disconnect the appliance and vacuum cleaning air vents and grilles.
23. Do not place the heater on carpet and don't place the cable under carpets. Arrange cord away from traffic areas so that it will not be tripped over.
24. Do not store away until the heater cools down, store the heater in cool dry location when not in use.
25. Do not use the appliance to dry clothes.
26. Do not immerse in liquid or allow liquid to run into the interior of the appliance, as this could create an electrical shock


hazard.

27. Do not use this appliance on a wet surface, or where it can fall or be pushed into water.
28. Do not reach for an appliance that has fallen into water. Switch off at supply and unplug immediately.
29. Use this appliance only as described in this manual. Any other use is not recommended by the manufacturer and may cause fire, electric shock or injury.
30. Do not use this appliance in a window as rain may cause electric shock.
31. Do not store appliance in a box or closed space until it has cooled down sufficiently.
32. Do not use this appliance as the heating equipment for animals and plants.

TECHNICAL SPECIFICATIONS

Model	CH-09FLCD
Rated Voltage	220-240V AC
Rated Frequency	50/60Hz
Rated Power	2300W

PRODUCT DESCRIPTION

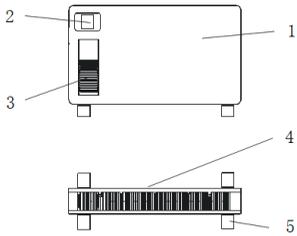


1	Front cover
2	Display
3	Turbo
4	Rear cover
5	Feet

INSTALLATION

Warning! Ensure the 2 feet assembled before using the heater, to secure enough distance from the standing surface.

1. Take the appliance and all the accessory parts out of the packaging and check that the appliance shows no signs of damage.
2. Overturn the main unit, assemble the two feet by using the four ST4 * 16 screws.
3. After completing the installation, put the heater on a firm level surface, ready to use.

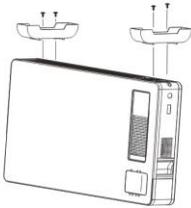

CONTROL PANEL



Control panel

Remote control panel



Mode



Fahrenheit/degree centigrade toggle key



on / off



Fan



+ button



- button



Timer

OPERATION

Warning! Ensure that there is sufficient distance from the wall, fixtures or other appliances. The distance must be at least 1.5 m from the front and sides wall of the appliance to exclude the risk of fire.

1. Take the appliance and all the accessory parts out of the packaging.
2. Check that the appliance shows no signs of damage.
3. Select a location that is firm, level and incombustible.
4. Insert the mains plug into a suitable wall socket with 220 – 240 V~50/60Hz and be sure power switch is on “OFF” position.

Operation instruction:

1. Remove heater products and spare parts from the paper box, place on firm level ground or desktop.
2. Before inserting the plug into an electrical outlet, make sure that the electrical supply in your area matches that on the rating label on the unit.
3. Setting the master button to “off”. Plug the cord set into a 220-240v~AC electrical outlet. Turning the master button “on” position.
4. Turn the heater ON by pressing the ON/OFF main button. The unit will display the current Room temperature.

5. And then by pressing the  button to start the unit.

6. Under mode 1000W/13000W/2300W, pressing the  and  button to increase or decrease the temperature setting. It starts to heat when the environment temperature below 2°C than the setting temperature. It will stop heating as soon as reach the setting temperature. The setting temperature range is 5-37°C.

7. Pressing  button to get heat directly. One time pressing is in 1000W setting, two time pressing is 1300W setting, three time pressing is 2300W, and four time pressing is Prevent Frost setting.

Prevent frost: after choosing this mode, icon is lighted, environment temperature is 5°C, 1000W heating element works, at the same time "1000W" icon light. When the environment is 4°C, 1300W heating element works, at the same time "1300W" icon light. When the environment $\leq 3^{\circ}\text{C}$, 1000W and 1300W heating elements work at the same time, "2300W" icon light. When the environment $\geq 6^{\circ}\text{C}$, thermal fuse stops heating, icon crush out, only prevent frost icon light.

8. By pressing , you can set the timer from 1-24 hours.

9. By pressing , could choose open or close fan, the fan icon will be lighted on the screen when the fan is working. Only under 1000W/1300/2300W mode, could open or close the fan. Under

other mode, cannot use fan. Switch to other work condition, the fan will automatically shut off.

10. By pressing **F/C** display temperature and setting temperature could be switched between Fahrenheit and degree centigrade.

REMOTE CONTROL

HOW TO INSTALL BATTERIES

1. Open the battery box on the back of remote control, and install One button battery(CR20323V).

2. Put the battery inside the slot, with anode and cathode in right directions.

3. Put on the back cover.

Slide the cover to open Be sure the direction is correct.

Notice:

1. The anode and cathode of the batteries must be corresponding to the signs of “+” and “-” on the remote controller.
2. For long time no use, take out the battery.
3. To prevent environmental pollution, take out the used battery and dispose safety and appropriately.

How to Use

To operate the **convector** heater, aim the Remote controller at the signal receptor. The remote controller at a distance of up to 6m



Commented [q1]: Add the “+” “-” mark

when pointing at signal receptor of the fan heater.

CLEANING AND MAINTENANCE

1. Before undergoing maintenance, please disconnect the power cord plug out the power source, can be carried out after 10 minutes cooling down.
2. The surface area of dust, with a soft cloth to wipe; when the surface is too dirty, available below 50 degrees Celsius of the mixture of water and neutral detergent touch water to wipe with a soft cloth and dry.
3. Do not use while clean gasoline, days that water, diluent and any easy to damage the surface material; because these things may react with heater and cause discoloration;
4. Product when not in use for a long period of time, unplug the power plug, wrap the machine to prevent dust into the machine.
5. When the heater should be cold, dry, packaged storage and dry ventilated place, as this may damage the appliance.
6. In case of breakdown and/or poor functioning of the appliance, disconnect the appliance from the power supply and contact an authorized repairer.

Information requirements for electric local space heaters

Model identifier(s): CH-09FLCD					
Item	Symbol	Value	unit	Item	unit
Heat output				Type of heat input, for electric storage localspace heaters only (select one)	
Nominal heat output	Pnom	2,236	kW	manual heat charge control, withintegrated thermostat	NA
Minimum heat output (indicative)	Pmin	0	kW	manual heat charge control withroom and/or outdoor temperaturefeedback	NA
Maximum continuous heat output	Pmax,c	2,236	kW	electronic heat charge control withroom and/or outdoor temperaturefeedback	NA
Auxiliary electricity consumption				fan assisted heat output	NA
At nominal heat output	elmax	0,0006	kW	Type of heat output/room temperaturecontrol (select one)	
At minimum heat output	elmin	0	kW	single stage heat output and no roomtemperature control	[no]
In standby mode	elsb	0,0006	kW	Two or more manual stages, no roomtemperature control	[no]

				with mechanic thermostat roomtemperature control	[no]
				with electronic room temperaturecontrol	[yes]
				electronic room temperature controlplus day timer	[no]
				electronic room temperature controlplus week timer	[no]
				Other control options (multiple selectionspossible)	
				room temperature control, withpresence detection	[no]
				room temperature control, with openwindow detection	[no]
				with distance control option	[no]
				with adaptive start control	[no]
				with working time limitation	[no]
				with black bulb sensor	[no]