

INSTRUCTION MANUAL



DISPLAY COOLER

CONTENTS

- SAFETY PRECAUTIONS ----- 2~5
- HOW TO USE ----- 6~7
- CLEANING ----- 8
- IN CASE OF THE FOLLOWING ----- 8~9
- BEFORE REQUESTING SERVICE ----- 9
- CORRECT DISPOSAL OF THIS PRODUCT ----- 10

Please read these instructions completely before operating the units.



Please read these instructions carefully before the first use of this product and save this manual for your future reference.


SAFETY PRECAUTIONS

To ensure proper use, please thoroughly study these safety precautions before operating the unit.

- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons to avoid a hazard.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- The appliance is not intended to be operated by means of an external timer or a separate remote-control system.
- This appliance has been incorporated with a grounded plug. Please ensure the wall outlet is well earthed.
- It is recommended to check regularly the supply cord for any sign of possible deterioration, and the appliance should not be used if the cable is damaged.
- Before using the appliance, check that the voltage of wall outlet corresponds to the one shown on the rating plate.
- The purpose of the safety precautions in this manual is to ensure safe and correct use of the unit to minimize risks that could cause serious damage and injury to you or other persons. The safety precautions are divided into WARNINGS and CAUTIONS. Cases where improper handling of the unit could lead to death or serious injury are listed under the "⚠ WARNING" heading. However, the cases listed under the "⚠ CAUTION" heading could also lead to serious results. To ensure the safety, adhere strictly to both types of safety precautions.

 **WARNING** Improper handling of the unit could lead to death or serious injury.

 **CAUTION** Improper handling of the unit could lead to serious results depending on the circumstances.

- Text set off by the exclamation mark  contains information that should be strictly adhered to.
- After reading the instruction manual, store it an easily accessible place where the user(s) of this product can easily find it.

◆ PRECAUTIONS FOR INSTALLATION

CORRECT DISPOSAL OF THIS PRODUCT



This marking indicates that this product should not be disposed with other household wastes . To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

 
PRECAUTIONS FOR USE




WARNING




All repairs, disassembly and modifications should be performed only by qualified technicians. Attempting to perform these yourself could result in a fire, malfunction, and injury.

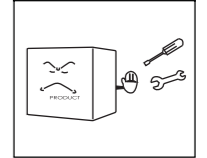

 
Never splash water directly onto the product or wash with water as short-circuit and electrical leakage could result.

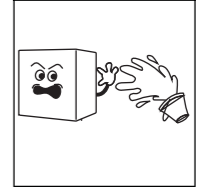

 
Never put flammable or volatile substances into the unit as explosion and fire could result.

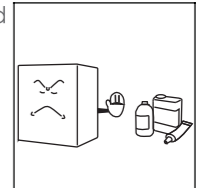


 
Do not damage, modify, excessively bend, strain, twist or bundle up the power cord. Also, placing heavy objects on the power cord or squeezing it in a tight place could damage it, possibly resulting in electrical shock or fire.

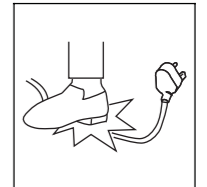

 
Use a dedicated wall outlet. Do not use extension cords or convenience receptacles as this could result in electrical shock, overheating and a fire.

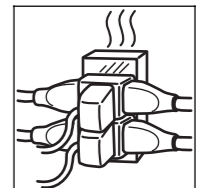

  Never use flammable spray cans or leave flammable substances near the unit. Sparks from electrical switches could result in explosion and fire.

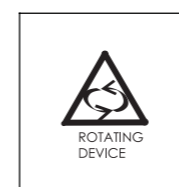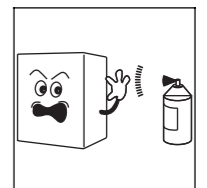

 
Never attempt to insert fingers, sticks, etc. into the cold air suction outlet. A circulation fan is rotating at high speed inside the outlet. Injury, electrical shock and improper operation could result.

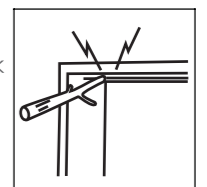


 **WARNING**



 
For indoor use only. Using the unit in a location exposed to rain could result in electrical leakage and electrical shock.

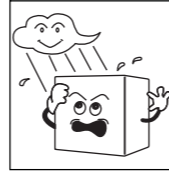


 
Never place heavy objects or items containing water on top of the unit. Objects could fall down and cause injury and spilled water could deteriorate the insulation of electrical components and result in electrical leakage.

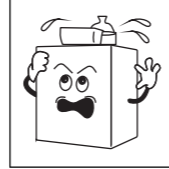


 
Install the unit in a location where the floor is sturdy enough to support the load of the unit. If the floor is not sturdy enough or installation is incorrectly performed, the unit could tip over and falling shelves and products could cause personal injury.

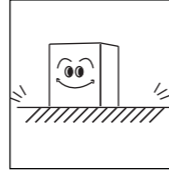

 
 
If you find gas leakage, please don't touch the unit, and close any gas appliance in the room and open the door for ventilation. Gas leakage cause explosion, fire, and fire injury.

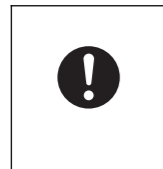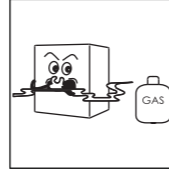

  
Store the unit in a location where it is not exposed to rain. Using a unit that has been exposed to rain could result in electrical leakage and electrical shock.

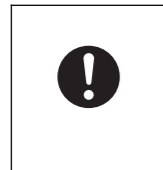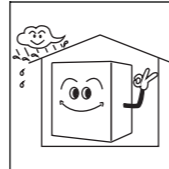

  Away from hot air sources Cooling performance is reduced if the unit is placed near heat sources such as hot plates and stoves and if it is exposed to direct sunlight.

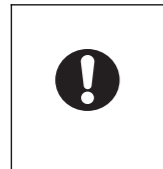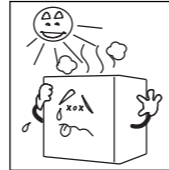

 
Leave disassembly and disposal of the unit to qualified experts.

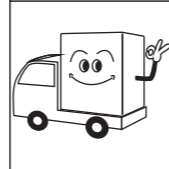

Should the unit need temporary storage, make sure not to store the unit in a location where children play and take precautions so that the door cannot be completely closed. This will minimize the risk that a child becomes trapped inside the compartment.



 Please make more than 10cm space between unit and wall. If there are no space, cooling capacity can drop down, due to ineffective ventilation.

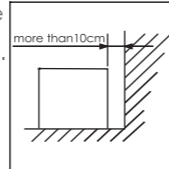

4 .TEMPORARY STORAGE

- Affix a piece of wood, etc. Between the door and main unit to prevent complete closing of the door.
- Make sure not to store the unused cooler at a location where children play. Should a child enter the compartment and the door is closed, the child may not be able to open the door from the inside.

BEFORE REQUESTING SERVICE

Please check the following items if you encounter problems with the unit. If the problem continues after taking the proper remedial actions, disconnect the power cord plug from the wall outlet. Transfer the items stored in the cooler to a box or other container. Then contact the dealer from whom you purchased this unit.

 **CAUTION**

To prevent any electrical shock hazards, do not disconnect the power cord plug from the wall outlet with wet hands.

No refrigeration at all	<ul style="list-style-type: none"> • Is the power supply interrupted? Is the power cord plug disconnected from the wall outlet? • Are the shop's power fuses blown and/or the circuit breaker activated?
Inadequate refrigeration	<ul style="list-style-type: none"> • Is the temperature setting appropriate? • Are items obstructing the cold air inlet and suction outlet? • Are stored items packed too tight? • Is the door open or is it opened and closed frequently? • Is the condenser clogged?
Excessive noise	<ul style="list-style-type: none"> • Are all feet in firm contact with the floor? • Is the rear panel of the cooler contacting the wall or other objects? • Are other objects in contact with the cooler?
Condensation on cooler exterior	<ul style="list-style-type: none"> • Condensation may occur on the exterior and door during hot and humid days or depending on the place of installation. This occurs when the humidity is high and water particles in the air contact cold surfaces. This is normal. wipe away condensation with a dry cloth.

Showcase sometimes stop running when thermostat turns off.

CLEANING AND MAINTENANCE

WARNING

To prevent any electrical shock hazards or in jury by rotating circulation fan,always isconnect the power cord plug from the wall outle before cleaning.

1. EXTERIOR AND COOLER COMPARTMENT

Wipe with a soft,dry cloth.If very soiled,wipe with a cloth that has been moistened with a detergent. Then wipe with a cloth that has been dipped in water.

WARNING

Do not splash water directly onto the cooler and do not wash with water. Short-circuit and electrical shock could result.

- Clean the cooler regularly to keep it clean at all times.
- Never use polishing powder,soap powder,benzine,oil or hot water as these will damage the painting and plastic components.

2. CHECKS

To ensure the safety, perform the following checks after cleaning.

- Is the power cord plug firmly inserted into a dedicated wall outlet? Confirm that the plug is not abnormally hot.
- Check the power cord for cracks and damage. Should the slightest irregularity be observed, contact the dealer from whom you purchased this unit or our customer's service.

IN CASE OF THE FOLLOWING

1. POWER FAILURE

- Keep opening and closing of the door to a minimum.
- Avoid placing new items in the cooler as this will raise the temperature inside the compartment.

 
2. WHEN NOT USED FOR A LONG PERIOD

- Remove all items from the compartment and disconnect the power cord plug from the wall outlet.
- Clean the compartment interior and wipe away all water.
To prevent mold formation and bad smell, leave the door open to dry the compartment completely.


3 .TRANSPORTATION

- Disconnect the power cord plug from the wall outlet.
- When moving the cooler, make sure that the feet do not damage the power cord.
- Do not let the feet hit against floor steps, thresholds, etc.



WARNING

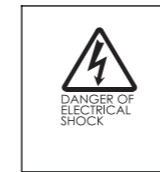

 
If installation in a damp location is unavoidable, also install an electrical leakage circuit breaker. If no electrical leakage circuit breaker is installed, electrical shock could result.

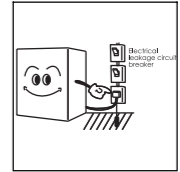

  
Never hang from the door or climb onto the unit. The unit could tip over or fall and cause material damage or injury.

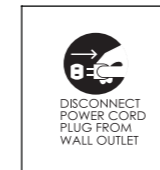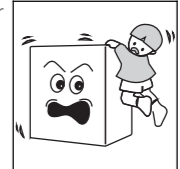

 Disconnect the power cord plug from the wall outlet before moving the unit and make sure that the power cord is not damaged during transport. A damaged power cord could result in electrical shock and/or fire.

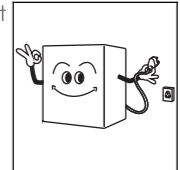

 
Grasp the handle when closing the door.Holding at other positions could result in pinched fingers and injury.

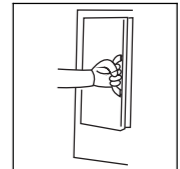


Do not push hand against or apply excessive force to glass surfaces as the glass could break and cause injury.



 
When disconnecting the power cord plug from the wall outlet, hold at the plug main body close to the outlet. Pulling the cord could cause wire breakage, possible resulting in overheating and fire.

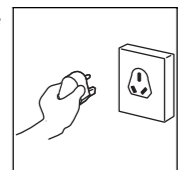

 
Make sure that the unit does not tip over or fall when it is moved. A falling unit could cause serious injury.

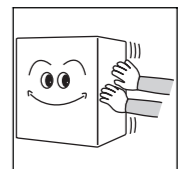

 Do not throw items onto the shelves and do not place items totaling more than 30Kg on eachshelf. The shelf could fall down, possibly cause injury.

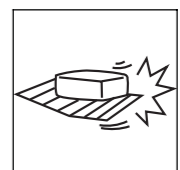

 Be sure attach and secure shelves correctly. An improperly attached shelf could fall downand cause injury.

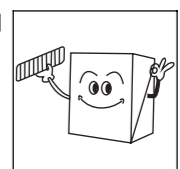

HOW TO USE

BEFORE USE

- Remove shipping package, tape, etc, and leave doors open ventilation for 60 minutes:
- The unit is cleaned before shipment. However, clean the compartment interior after delivery.
- Please insert power supply plug into the wall outlet .
- Allow the unit to operate for about 1 hour to cool the compartment before placing items in the cooler.

WAIT 5 MINUTES OR MORE BEFORE RE-STARTING

- Restarting the unit immediately after it has been turned off may cause fuses to blow and activate the circuit-breaker, the compressor may be overloaded, and/or other damage may occur.

TEMPERATURE ADJUSTMENT

- For showcase cooler,the interior temp.during fully loaded at factory default setting of position at 4-5 will be kept at 0-10'c .If the ambient temp.is extremely high or the stuffing food inside is too much,that might cause the interior temp.a little bit higher.so,it would be better turn the thermostat right so as to maintenance the right temp.On the opposite,if the ambient temp.is very low or empty loaded,or in less food storage,the interior temp.might be able to reach minus0'c,and in return to cause the evaporator ice up;Thus,it would better switch the thermostat back to left so as to relieve something.

DRAIN TRAY

- Defrosting is performed automatically and drain water is collected in the drain tray.
- Water in the drain tray is evaporated automatically. In humidity, large amount of water in the drain tray, so please throw away drain water once a day.

EFFICIENT USE

Please follow the below instruction, you could save energy.

- To prevent cold air from escaping, open and close the door quickly and keep the door opened for as short a time as possible.
- Please install the unit in the place which is well-ventilated.

SHELF HEIGHT ADJUSTMENT

The shelf height can be adjusted.

Arrange the shelves in accordance with the dimensions of the items to be placed in the cooler.

PLACING ITEMS IN THE SHOWCASE

This showcase employs a forced circulation of cold air system. If circulation of cold air is obstructed, the items will not be adequately refrigerated. Pay attention to the following points:

- Do not let items obstruct the cold air inlet and suction outlet.
- Place items so that they do not protrude from the shelves. The gap between the shelves and the door is used for circulation of cold air.
- Place items evenly on all shelves.
- Please do not display goods on the bottom. Please put goods on the shelf.

HOW TO USE

 
Thermostat instruction

Operation

Control Panel

The control panel is located below the doors on the front of the appliance.

Turn on

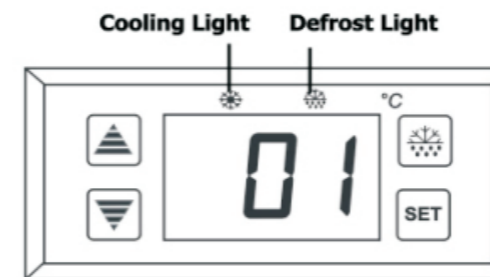

1. Turn the power switch on.
2. Set the temperature to the desired setting(see below).
3. Close the door of the appliance.
4. Connect the appliance to a mains power supply.

Note:The cooling light is illuminated when the appliance is chilling the interior cabinet.

5. Turn light switch on[I] or off[O] as required.

Set the operating temperature

- 1.Press the **SET** button,the display will flash.
- 2.Press the **▲** or **▼** buttons to display the required temperature.
- 3.Press the **SET** button to store the temperature.

Manual defrost

Cooler feature an automatic defrost.However,should the appliance require and additional defrost period press and hold the **☸** button for 6 seconds.

Automatic defrost cycles are every 6 hours and last 20 minutes(factory defaults).

To stop the defrost press and hold the **☸** button for 6 seconds.

Note:If a manual defrost is started this resets the automatic defrost timer.During defrost periods the defrost light is illuminated.