

Electric Chafer

Instruction manual



Model • Modèle • Modell • Modello • Modelo • Malli:

AD1102 / AD3202 / AD6002

Safety Tips

- Position on a flat, stable surface.
- A service agent/qualified technician should carry out installation and any repairs if required. Do not remove any components on this product.
- Consult Local and National Standards to comply with the following:
 - Health and Safety at Work Legislation
 - BS EN Codes of Practice
 - Fire Precautions
 - IEE Wiring Regulations
 - Building Regulations
- The inner bowl and the heating plate on the underside of the appliance become hot during operation -
DO NOT TOUCH!
- DO NOT allow to boil dry or use without water in the outer pan.
- Always switch off and disconnect the power supply to the appliance when not in use.
- Keep all packaging away from children. Dispose of the packaging in accordance to the regulations of local authorities.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.



Introduction

Please take a few moments to carefully read through this manual. Correct maintenance and operation of this machine will provide the best possible performance from your product.

Pack Contents

The following is included:

- Electric Chafer
- Instruction Manual

prides itself on quality and service, ensuring that at the time of packaging the contents are supplied fully functional and free of damage.

Operation

Before turning on ensure the heating plate is securely attached to the underside of the appliance.

1. Lift the lid and remove the inner bowl.
2. Fill the outer pan with hot water.



WARNING: Ensure the water level is between the 'MIN' and 'MAX' levels.

3. Place the food in the inner bowl and replace the bowl in the outer pan.
4. Turn on the appliance at the mains power supply.

Cleaning, Care & Maintenance



Always turn off and disconnect the appliance from the power supply before cleaning.

- Use soapy water and a damp cloth to clean the exterior of the appliance.
- DO NOT immerse the appliance in water.
- The inner bowl can be removed and cleaned with warm, soapy water.
- At no point must the heating plate come into contact with water.
- Dry thoroughly after cleaning.


Fitting/Removing the Heating Plate

1. Disconnect the appliance from the power supply and allow to cool.



WARNING: Failure to allow the appliance to cool could result in burns!

2. Remove the inner bowl.
3. Lift the lid/outer pan section from the frame and place gently on its side.
4. Unscrew the four nuts securing the heating plate to the underside of the appliance and remove the heating plate.
5. Fitting is a reversal of the above procedure.

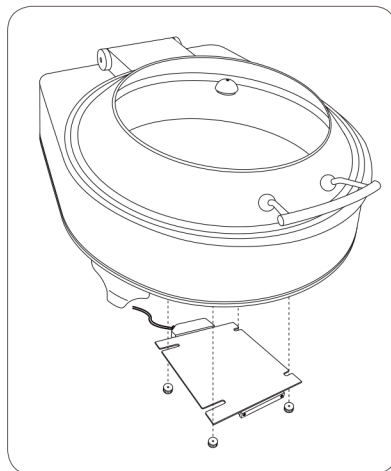

Troubleshooting

Fault	Probable Cause	Solution
The unit is not working	The unit is not switched on	Check the unit is plugged in correctly and switched on
	Fuse in the plug has blown	Replace the fuse
	Power supply	Check power supply
Foodstuffs do not stay warm	Heating plate has become loose	Disconnect from power supply. Allow heating plate to cool and tighten nuts
	No water in outer pan	Fill outer pan with HOT water no higher than MAX level
	Lid not fully closed	Close lid

Technical Specifications

Model	Voltage	Power	Capacity	Weight	Dimensions H x W x D mm
AD6002	220V~50Hz	400W	6 Liters	8KGS	500×460×255
AD3202	220V~50Hz	400W	5.5 Liters	8KGS	450×420×255
AD1102	220V~50Hz	400W	9 Liters	10KGS	600×460×255

Electrical Wiring

This appliance is supplied with a 3 pin, moulded, BS1363 plug and lead, with a 13 amp fuse as standard.

The plug is to be connected to a suitable mains socket.

Appliances are wired as follows:

- Live wire (coloured brown) to terminal marked L
- Neutral wire (coloured blue) to terminal marked N
- Earth wire (coloured green/yellow) to terminal marked E

If in doubt consult a qualified electrician.

Electrical isolation points must be kept clear of any obstructions. In the event of any emergency disconnection being required they must be readily accessible.

Compliance

The WEEE logo on this product or its documentation indicates that the product must not be disposed of as household waste. To help prevent possible harm to human health and/or the environment, the product must be disposed of in an approved and environmentally safe recycling process. For further information on how to dispose of this product correctly, contact the product supplier, or the local authority responsible for waste disposal in your area.

Parts have undergone strict product testing in order to comply with regulatory standards and specifications set by international, independent, and federal authorities.

Products have been approved to carry the following symbol:

