 


Operating instructions

Vacuum cleaner
Type: K-411F/1200

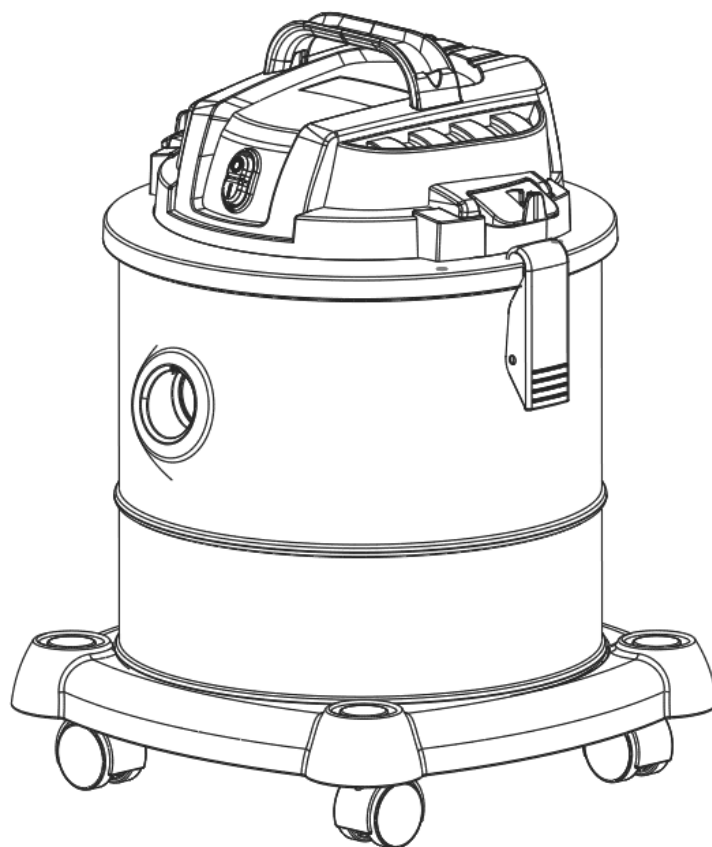

IP24

MADE IN CHINA





Congratulations on the purchase of this high-quality product. Please read this operating instruction attentively, before you take the appliance in operation. It gives important notes for security, the use and maintenance of the appliance. If you have further questions, please contact our customer service.

Contents:

 
- Description of the appliance
- Appliance figure
- Important safety instructions
- Assembly
- Operation
- Cleaning and maintenance
- Error detection
- Technical data
- Circuit illustration

Description of the appliance:


- Powerful and compact
- Wet & Dry
- Multiple air filter system guarantees a hygienic cleaning
- With special air-blowing function
- Special parking position for easy use and space saving
- Airflow control on handle
- Rotary wheels facilitate moving and running.
- Divers accessories.
- User-friendly design.

Adexa


Appliance figure:

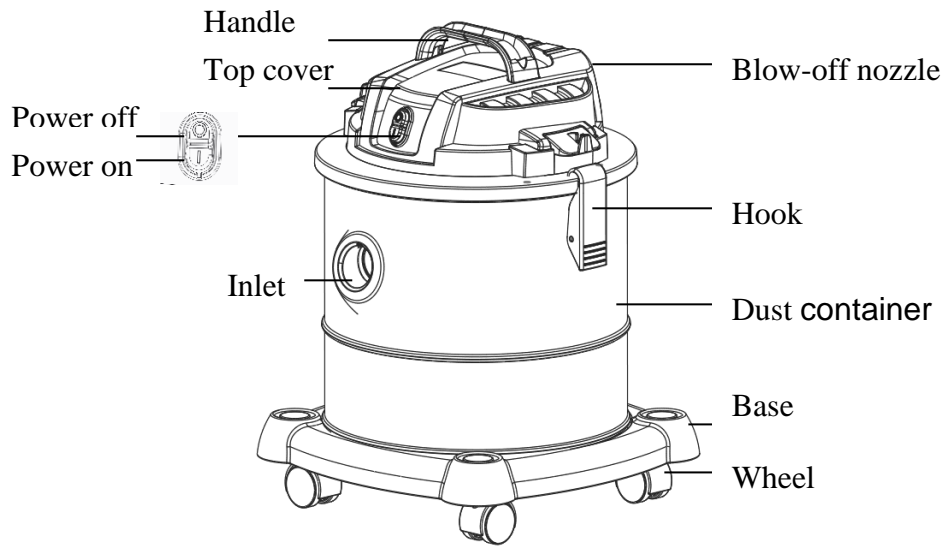


Filter bag

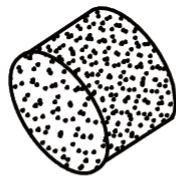 

Sponge

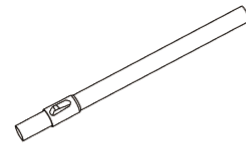 


Tube

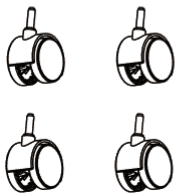 


Castors



 Assembled brush

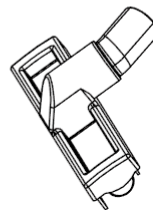

Brush

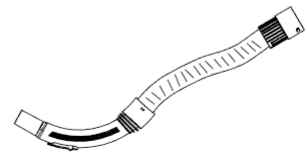 










Hose assembly

Adexa


Important safety instructions:

If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent .

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance, Cleaning and user maintenance shall not be made by children without supervision.

 
 
 

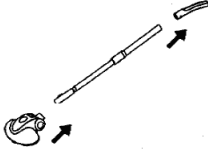 
⊘	Do not vacuum any sharp-edged, hot or incandescent materials.	
⊘	The appliance should not be exposed to heat.	
⊘	Unplug the appliance from the mains supply socket after use and before every cleaning. Pull the plug, not the mains cable, in order to disconnect the appliance from the mains.	
⊘	Do not put any object into openings. Do not use with any opening blocked. Keep free of dust, lint, hair etc.	
⊘	Do not use the vacuum cleaner without dust container or dust filter in place.	
⊘	Do not vacuum any flour, cement etc, in order to avoid the overloads.	
⊘	The appliance should only be cleaned with a dry or damp cloth; it should never immersed in water. Do not use any solvents for cleaning.	
⊘	This appliance is intended for domestic use only and not for commercial applications.	
⊘	Avoid the nozzle or brush touching the surface of the furniture.	

Adexa


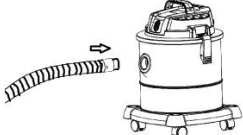 
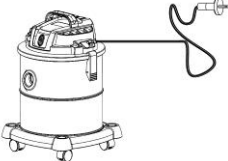 
⊘	Do not use the mains wire to carry the appliance. Do not pull the mains wire over sharp edges.	
---	--	---

Adexa

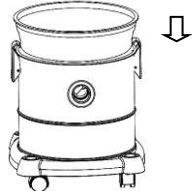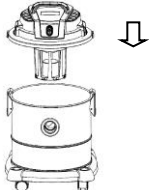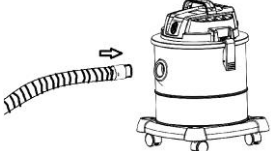


Assembly:

<p>Dust filter: Put the filter in the dust container carefully.</p>	
<p>Dust container: Attach the dust container to the hand vacuum cleaner.</p>	
<p>Flexible hose (optional): To use the flexible hose, insert the end of the hose into the suction hole. Make sure, that it is snapped in the position.</p>	
<p>Air-blowing function: Insert the end of the hose into the Blow-off nozzle. Make sure, that it is snapped in the position.</p>	
<p>Accessories: Choose your desired accessory (brush or nozzle) and attach it to the suction hole.</p>	

Operation:







	<p>Before you start the appliance, make sure that the filter is in the position.</p>
	<p>Before you start the appliance, make sure that the hose assembly is in the position. or else the appliance had mangled.</p>
	<p>Unwind the power cord.</p>

Adexa

	Plug the appliance and switch on.
	Unplug the appliance after use
	Blower function: put the hose in the hole

Attach the desired accessories to the vacuum cleaner.

      Cleaning and maintenance:

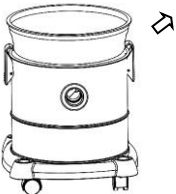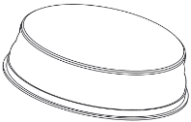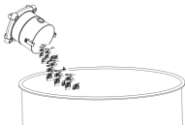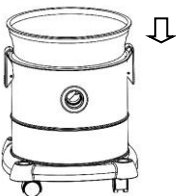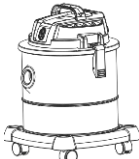	Open the dust container.
	Take out the Dust bag.
	Cleaning up the dust bag.(In necessity, Wash in water. But it must be dry before the next used.)
	Throw out the garbage.
	Put the clean dust bag.
	Assemble the vacuum cleaner.

Adexa

Error detection:

Before you contact our service center, please check the following:

Problem	Possible reason	Advice
Motor does not start	-Power cord not firmly plugged into outlet. -Outlet damaged. -Cleaner not switched on.	-Plug unit firmly. -Check the Outlet. -Switch on the appliance
Suction power is weaker	-Unit clogged -Paper filter needs replace	-Remove the blockage. -Replace the paper filter.

Correct Disposal of this product



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems of contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

Technical data:

Rated voltage: 220-240V AC

Rated frequency: 50/60Hz

Rated power: K-411F/1200:1200W

Operating pressure: ≥ 16 kPa

Circuit illustration:

220-240V 50/60Hz

