

User Manual



Pizza Oven

Models: MLP-1ST/MLP-2ST

UNITS MUST BE KEPT CLEAR OF COMBUSTIBLES AT ALL TIMES

Please read and save these instructions for future reference. Indoor use only.

GENERAL SAFETY INSTRUCTIONS

WARNING! Please read this instruction manual and all safety instructions carefully before use. Failure to do so may result in impaired operation, damage to the appliance, other parts, or serious injury to persons! **IMPORTANT:** Your safety is your responsibility!

The electric pizza oven is intended exclusively **for the preparation of food**. The manufacturer declines all responsibility for improper use of the appliance. Any damage resulting from improper use will invalidate the warranty.

- Check the appliance for damage in advance. Before using the appliance, check that all parts function properly and that the intended application can be carried out. Check the assembly of moving parts and fastenings that may affect operation. The unit may only be operated in a technically perfect and operationally safe condition.
- Structural modifications to the unit will invalidate the warranty.
- Only use the accessories supplied. Defective components may only be replaced with original spare parts.
- Do not operate the unit outdoors.
- Do not place the unit in a hot, wet, or very humid environment or near flammable materials.
- Make sure that the appliance is stable during use. All feet must have a secure footing on a flat surface that is not sensitive to heat. Do not move the appliance or tilt it during operation.
- Only use cooking utensils that are suitable for heat and do not scratch. Never cut food directly on the cooking surface.
- Do not leave the appliance unattended during use.
- Keep children away. The appliance is not a toy.
- Do not operate the appliance using a timer or a separate remote control.
- Always switch off and unplug the appliance when not in use, when cleaning and in case of malfunction.



RISK OF INJURY DUE TO HIGH TEMPERATURES

- Some components of the unit become very hot during operation! There is a risk of burns when touching these parts! Use HEAT RESISTANT GRILLING GLOVES!
- Before any cleaning or repair, let the appliance cool down completely, switch it off and unplug it from the mains.



DANGER FROM ELECTRIC CURRENT!

- Only connect the appliance to a grounded socket with the cable fully unwound.
- Never open the casing of the appliance. Risk of electric shock!
- Unplug the appliance after each use, for cleaning or maintenance.
- Check the unit regularly for damage. Never operate the unit if the power cable or plug is damaged if it is not working properly or if it has been dropped. Danger to life due to electric current!
- Make sure that the power cable is not under much tension. It must not meet heat sources or sharp edges. Make sure that no one can step on or trip over the power cable.
- Keep the mains cable away from the work area, do not cover it and do not immerse it in water.
- Never immerse the appliance, power cord, or plug in water or other liquids.

Keep these instructions for use near the machine and hand them over to any subsequent owner! Use the instructions to instruct other users.



Incorrect handling can lead to serious injury or damage to the unit.

No liability is accepted for damage caused by failure to observe these instructions.

PARTS LIST



PART	NAME	QUANTITY
A	Pizza oven housing	1x
B	Pizza oven door	1x
C	Handle	1x
D	Window	1x
E	Pizza stone	1x
F	Light switch	1x
G	Timer knob	1x
H	Temperature control knob (BOTTOM)	1x
I	ON/OFF light (BOTTOM)	1x
J	Temperature control knob (TOP)	1x
K	ON/OFF light (TOP)	1x
L	Mains plug with cable	1x
M*	Fixing rail	2x
N*	Light bulb	1x

* Without illustration

OPERATION

1. Connect the appliance to a properly installed socket.
2. Set the desired temperature on the temperature controls (50°C- 350°C). The upper knob controls the top heat, the lower knob the bottom heat. The respective ON/OFF light goes on and the appliance now heats up.
3. Open the pizza oven door with the handle by lifting it slightly upwards and then downwards towards the front.
4. Carefully place the food on the pizza stone.
5. Close the pizza oven door again. You can watch the cooking through the window. If necessary, switch on the light in the oven at the light switch.
6. If necessary, set the timer to the desired time.
7. Remove the food when it has finished cooking.
8. Turn both temperature knobs to the 0°C position (the ON/OFF lights go out) and turn off the timer when the pizza oven is no longer needed. Unplug the appliance from the mains.

BEFORE FIRST USE

Clean the outside of the pizza oven with warm soapy water and a soft cloth. Use only a damp cloth for cleaning the inside. Do not touch the heating elements.

Then close the pizza oven door and set both temperature controls to 200°C and the timer to 20 minutes. The heating elements have a thin coating that should be burnt off before the first use. A slight smoke development is normal during this process. When the time has elapsed, open the pizza oven door to remove any smoke residue from the oven. Wait until the oven has cooled down completely and wipe down the inside walls and pizza stone again with a damp cloth.



- The appliance becomes very hot when in use. Use heat-resistant grill gloves!
- Do not cook greasy food, because grease can damage the heating elements.
- Only use heat-resistant vessels and cooking utensils.
- Never use aluminium foil as a base.
- Never pour cold liquids onto the hot pizza stone. This could crack!

CLEANING

- Switch off the appliance, unplug it from the mains and wait until all parts have cooled down.
- Wait until the appliance has cooled down completely before you start cleaning it.
- Clean the outside and inside of the appliance with a soft, damp cloth. If necessary, use warm soapy water to remove dirt.
- Only wipe the pizza stone with a damp cloth.
- Do not use any sharp and/or scratchy cleaning agents, as these could damage the materials.
- Then dry all the cleaned parts thoroughly. If necessary, leave the oven door open for a short time for drying.
- Always clean the appliance after each use.
- Never immerse the appliance in water or other liquids.
- The appliance is not suitable for cleaning with a pressurised water jet.
- If the appliance is not used for a longer period, it should be stored in a dry, frost-free room.

TECHNICAL DATA

Electric pizza oven

Model:	MLP-1ST
Empty weight:	17 kg
Dimensions (length x width x height):	56 x 48,5 x 28 cm
Electrical connection:	220 V, 50 Hz
Power:	2000 W
Temperature range:	50° to 350° C



Electric pizza oven

Model:	MLP-2ST
Empty weight:	34 kg
Dimensions (length x width x height):	56×48,5×44 cm
Electrical connection:	220 V, 50 Hz
Power:	3000W
Temperature range:	50° to 350° C



DISPOSAL



This appliance contains recyclable electrical components.

At the end of its life, the appliance must not be disposed of with normal household waste but must be recycled.

For disposal, the appliance can be taken to appropriate locally available return and collection points.

Dispose of the packaging material in an environmentally friendly manner and take it to the recycling collection point.

NOTE

Check your unit for damage and/or faults before each use.

If you cannot rectify a problem, please contact your dealer.

Never attempt to carry out repairs to the unit yourself.