


**145mm**

**210mm**

**Adexa**

# **TOASTER USER MANUAL**

**Model:SS4ST**

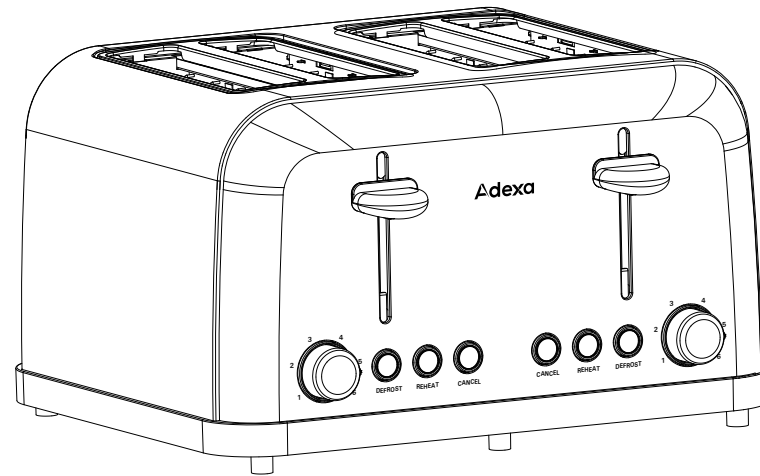

**Adexa**

## **CONTENT**

<b>1. SAFETY INFORMATION</b>	<b>1</b>
<b>2. CONTROLS AND FEATURES</b>	<b>2</b>
<b>3. REHEAT</b>	<b>3</b>
<b>4. DEFROST</b>	<b>3</b>
<b>5. TOASTING TIPS</b>	<b>4</b>
<b>6. CARE AND CLEANING</b>	<b>5</b>

145mm

210mm

Adexa

1. SAFETY INFORMATION

- DANGER**  
Immediate hazards which **WILL** result in severe personal injury or death.
- WARNING**  
Hazards or unsafe practices which **COULD** result in severe personal injury or death.
- CAUTION**  
Hazards or unsafe practices which **COULD** result in minor personal injury.


IMPORTANT SAFETY INSTRUCTIONS

**WARNING**  
When using electrical appliances, basic safety precautions should be followed, including the following.

- Please read the user manual carefully before using it.
  - The Toaster is use it indoors , not for outdoors. While using, put it on a flat surface and keep it away from flammable objects, such as curtains, carpets, and clothes.
  - The voltage of the socket should correspond to the **Toaster** value 120V. **DO NOT** immerse the toaster (including the power cord and the plug) into water.
  - To prevent scald, be careful to fetch and insert bread because the temperature of the toaster surface is rather high during and after use.
  - Children are not allowed to operate the toaster until they are supervised by adults.
  - To avoid fires or electric shocks, **DO NOT** touch the food directly in the slot or use the metal appliance.
  - To avoid danger, maintenance should be conducted by a qualified technician or you can also ask the manufacturer for help if the toaster goes wrong, or the power cord is damaged.
  - Please **DO NOT** put your hand in the toaster. The internal parts of the toaster are sharp, which will scratch your hand.
  - If you need to take food out of the **Toaster**, please use tools, such as a tongs.
  - If encountering the big breadcrumbs stuck on the bottom of the toaster, please clean it up immediately for better bread favor. If not clean up on time, in the process of toasting, the stuck bread will cause smoke, worse, it will be on fire, which will damage the toaster.
  - The use of an extension cord is not recommended, as overheating of the extension cord may occur during operation of the toaster.
  - DO NOT** place on or near a heated oven or a hot gas or electric burner.
  - Oversize foods, metal foil packages, or utensils **Must** not be inserted into the toaster as they may involve a risk of fire or electric shock.
  - The plastic bag in which the appliance was packaged should be kept out of reach of children as it poses a suffocation hazard. In order to remove the dust that may have accumulated on the appliance, simply dust it off with a soft cloth.
- Note:** Normally, a small part of the heating wire may not light up during the process of toasting, but it is heating normally.

Adexa

2. CONTROLS AND FEATURES

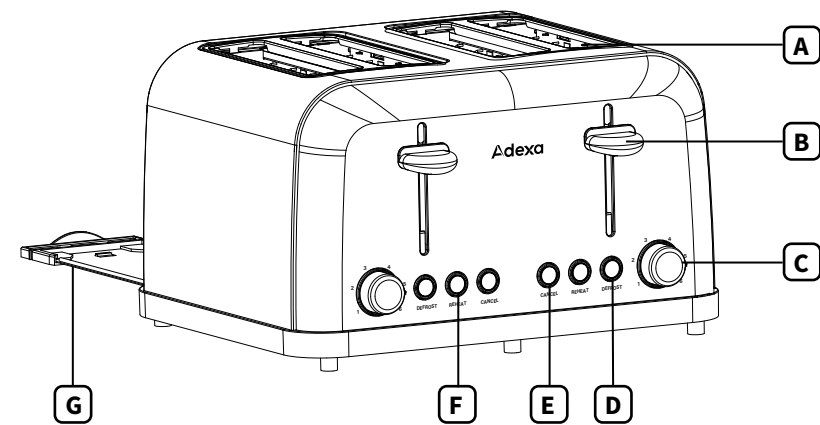

DIAGRAM

- A** Toaster Slots
- B** Lifting Lever
- C** Control Knob
- D** Defrost Button
- E** Cancel Button
- F** Reheat Button
- G** Removable Crumb Tray

SPECIFICATION

Capacity	4 Slices
Rated Voltage	220-240V~ 50-60Hz
Rated Power	1300-1500W

145mm

210mm

Adexa

### Note

1. To prevent scald, fetch the bread with a tong. If you want to clean the Toaster, wait until it is cooled down.
2. The thickness of the bread will directly influence the toasting time and color. If it's the initial use for you, you may be unfamiliar with the precise setting for different thicknesses of bread. Try several times, and it will be better.
3. Insert no more than 2 slices of bread for each time.

Browning Control Setting & Color	
1-2	Light
3-4	Medium
5-6	Dark

### 3. REHEAT

If you are not satisfied with the browning color and the toasted bread isn't heated enough. At this moment, you can heat it again.

1. Insert the bread into the bread slot, adjust the control knob to the reheat setting and then press down the Lifting Lever.
2. The bread will bounce when the countdown finishes.
3. Press the Cancel button to interrupt at any moment.

### 4. DEFROST

Press DEFROST button to defrost and heat frozen bread. The bread begins to work with an indicator light on, and the toasting time will be longer than that doesn't need defrosting.

- Insert slices of bread into the slots and lower the Lifting Lever.
- Press DEFROST button and the indicator light will be on. Adjust the control knob to desired setting then the countdown begins.
- After the countdown finishes, the bread will spring up automatically. For any reason, you want to stop, press the CANCEL button.

3

Adexa

### 5. TOASTING TIPS

1. The toasting process includes drying and baking. Different types of bread with different extent of moistness will cost different toasting times.
2. You can preheat the toaster if you prefer.
3. Adjust the control knob to the lower setting if the bread only needs slight toasting.
4. Adjust the browning control knob to a higher setting if slices of bread are freshly made or made of plain flour.
5. A thicker slice of bread or bagel takes you more time to toast. The moister the bread, the longer it takes.
6. A second toasting may be needed for the thick bread.
7. To prevent stuff from dropping into the slots and attaching to the internal parts, remove loosen accessories, such as raisins on the bread.
8. Be careful not to be scalded by the cake, pie filling, etc. because they are still hot before their surfaces turn golden brown.
9. When you try to toast bread slices continuously, the toaster will automatically shorten the baking time to adjust the temperature change in the furnace.

4

145mm

210mm

**Adexa**

► **6. CARE AND CLEANING**

1. When you would like to clean the toaster, please unplug it first and wait until it is cooled down.
2. **Do not** immerse the toaster into water, including the power cord and the plug. Use a dry or damp cleaning cloth to wipe the outside surface with detergents. However, detergents should not use directly on the Toaster.
3. Please clean the crumb tray after each use.
4. If there is a small crumb left or a big crumb stuck inside the toaster, please turn the toaster upside down and shake gently. Never use a hard or sharp object to touch internal parts of the toaster, otherwise, it may damage the toaster or cause safety risks.



Made in China